

Cargo Lift Installation, Dimension Guide

Cargo Lift Basket Sizing Guide


Cargo Lifts are really easy to install for a Do IT Yourself Project. After you determine WHERE you want to install your lift here are some basic requirements you should consider, , ,

How to Determine Gate Positions in Relation to the Aluminum Supports

Determine Gate Position on Basket

Gates can be installed to swing left or right.
All gates swing OUTWARDS

Gate Position is Determined by their relationship to the
BACK SUPPORT POLES

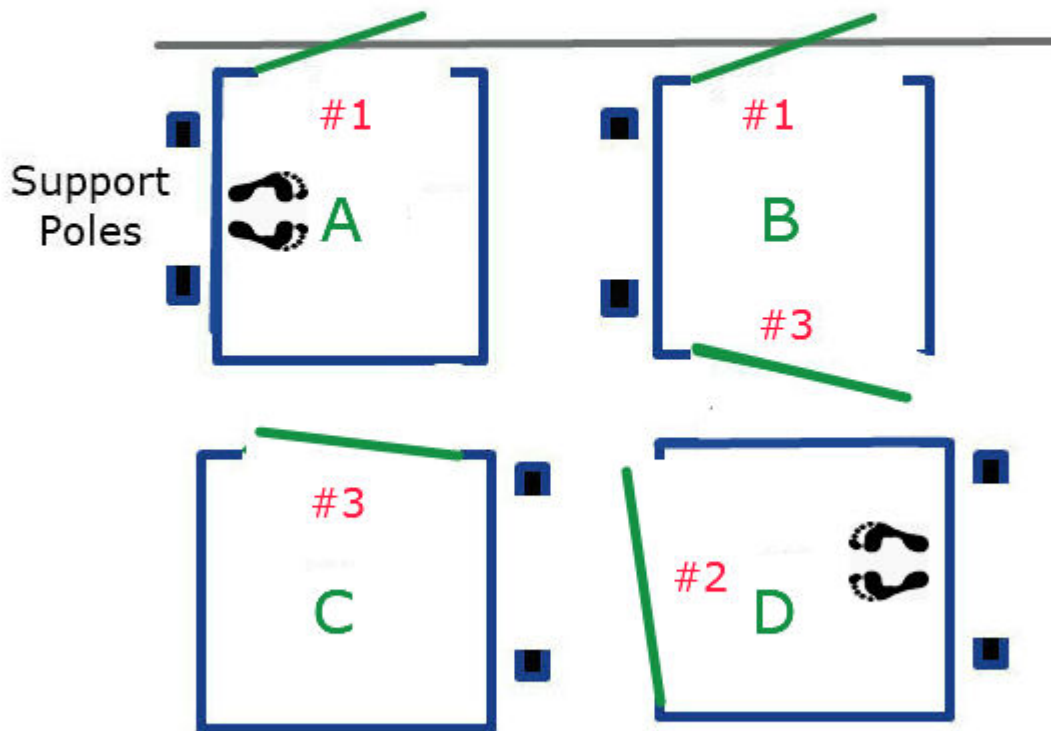

Questions? HomeLand MFG 888-661-0845

OPTIONAL Multiple Gate Openings are available in ANY LOCATION except where the back support poles are located. You can also have Gate Combinations of location #1 and #2 OR #3 and #2 OR all 3 Sides with Gates or NO GATES.

Don't Be Restricted With Only TWO Gates !

3 Gates !

Cargo Baskets with 3 Gate Possibilities Allow
for Move Flexibility in Your System
Placement




Don't be RESTRICTED
by System Design Limitations !

We have baskets
IN STOCK
Fast delivery ANYWHERE
or Installation In FLORIDA

Cargo Lift PRO
888-661-0845

**The Electrical Requirements: 220/20
amps.**

**Typically a Junction Box is used to
feed/connect our Cargo Lift Control
Panel. Disconnect Box can be
installed UNDER the deck by your
electrician.**

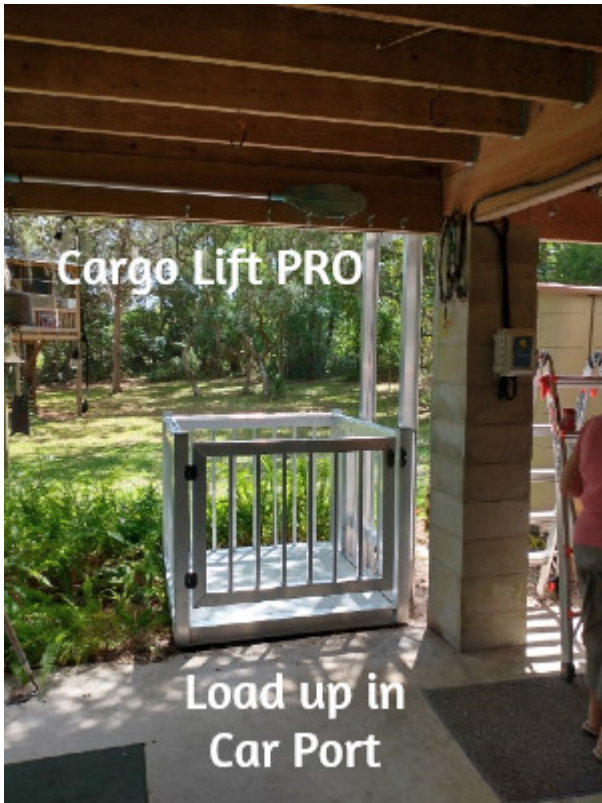

CARGO LIFT: with 53 3/4" Long, (away from poles) X 52" Wide exteriors
 CONCRETE SLAB: is shown as 65" Long (pole side) X 55 1/2"
 DECK HOLE: allow apx 2" or MORE on each side of basket
 OVER ALL SYSTEM LENGTH: with poles 60 1/4"
 BRACE: Allow 3" for mounting brace

HOISTWAY DIMS SHOWN IN RED
 MINIMUM SLAB SIZE IS THE SAME

